## STALKER ONE (4001 & 4002) 80 CHANNEL CONVERSION

- STEP 1. Remove covers.
- STEP 2. Locate PLL and remove cover in Fig. 1.
- STEP 3. Locate D858 in Fig. 1 and cut pin 19 close to PC Baord as indicated in Fig. 2.
- STEP 4. Solder a 1,000 Ohm ½ watt resistor from pin 19 to supply line in Fig. 1.
  - CAUTION: DO NOT OVERHEAT PIN 19 as this can cause damage to PLL.
- STEP 5. Disconnect Red, White, Green and plain wires from noise blanker switch.
- STEP 6. Reconnect Red and White wires by soldering and then taping off.
- STEP 7. Reconnect Green and plain wires by soldering and then taping off.
- STEP 8. Connect a wire from Pin 19 to center contact of noise blanker switch.
- STEP 9. Connect a wire from ground to TOP contact of noise blanker switch.
- STEP 10. Reassemble unit.
- STEP 11. Check unit by using a frequency counter and attached chart.

You may experience some loss of power and sensitivity at the upper end of the band, this is normal.

CAUTION: DO NOT ATTEMPT TO REALIGN TRANSMITTER OR RECEIVER.

To operate simply push NB switch up for normal channels and down for expanded channels.

## Slider for Stalker 101 and 202

- STEP 1. Remove D 30.
- STEP 2. Replace D 32 with a 7.6V zenor.
- STEP 3. Jumper 116. Or replace with a SolID Bass wife
- STEP 4. Remove R 119 from RX supply line.
- STEP 5. Connect open end of R 119 to IC6 pin #1 (9v supply line)
- STEP 6. Range +1.5 Khz to -3 Khz
- STEP 7. R161 may have to be paralleled with a 56 ohm, if distortion occurs.

## STALKER ONE (4001 + 4002)

CHANNEL	FREQUENCY	
1	26.565	
1 2	26.575	
3	26.585	
4		
5	26.605	
	26.615	
6	26.625	
7	26.635	
8	2 <b>7.</b> 455	
9	27.465	
10	27.475	
11	27.485	
12	27.505	
13	27.515	
14	2 <b>7.</b> 525	
15	2 <b>7.</b> 535	
16	27.555	
17	2 <b>7.</b> 565	
18	2 <b>7.</b> 575	
19	27.585	
20	27.605	D-858
21	27.615	
22	27.625	PLL PIN 19
23	2 <b>7.</b> 655	
24	27.635	
25	27.645	21/2//
27	27.675	FIGT \$1K1/4W
28	27.685	
29	27.695	1+8 UOLTS
30	2 <b>7.7</b> 05	- 11000K13
31	27.715	
32	27.725	
33	27 <b>.7</b> 35	* Do the same except lift pin
34	27 <b>.7</b> 45	23 and frequency will go
35	2 <b>7.</b> 755	down instead of up.
36	2 <b>7.7</b> 65	
37	2 <b>7.7</b> 75	* The mod may not work on some
38	27.785	radios.
39	27.795	
40	27.805	0
		aut DC Foil
		I INST /K-L/4W
		6000
		ريو ۱۱۱ سن
		Fig 2
		Fig 6
		, ,