



**Consumer Response Group**

6500 W. Cortland Street \* Chicago, IL 60707 \* Phone: 773-889-8870 \* FAX: 773-622-2269  
-----

February 3, 2006

Page 1 of 2

# **TECHNICAL SERVICE BULLETIN 10050**

**MODEL(S):** 200GTL

**DESCRIPTION:** The frequency display is not accurate.

**ACTION:** To calibrate the frequency counter:

1. Connect a dummy load and a frequency counter to the antenna connector.
2. Set the mode selector to AM.
3. Set the channel to 28.0000MHz (or any other desired frequency). If necessary adjust the Clarifier control until the frequency display reads exactly the correct frequency.
4. Key the microphone and adjust T711 until the transmit frequency exactly matches the frequency display.

See page 2 for the location of T711.

**ADJUSTMENTS:** As described above.

**NOTES:** None.

