



Consumer Response Group

6500 W. Cortland Street * Chicago, IL 60707 * Phone: 773-889-8870 * FAX: 773-622-2269

May 2, 2008

Page 1 of 2

TECHNICAL SERVICE BULLETIN

10060

MODEL(S): 29 LTD with factory blue lighting

DESCRIPTION: How to adjust the BRT / DIM lamp intensity.

ACTION: To change the intensity of the meter lamp:

- BRT setting: change R118 (higher value = lower intensity)
- DIM setting: change R119 (higher value = lower intensity)


Changing the intensity of the channel display is a bit more difficult:

- To adjust both the BRT and DIM settings, change R117.
- If you want to adjust only the DIM setting, change R115.
- If you want to adjust only the BRT setting, change R117 and then check the DIM setting and adjust R115 as needed.

Resistor locations are shown on page 2.

ADJUSTMENTS: None

NOTES: If you lower the intensity of the channel display too much, some segments may appear brighter than others.

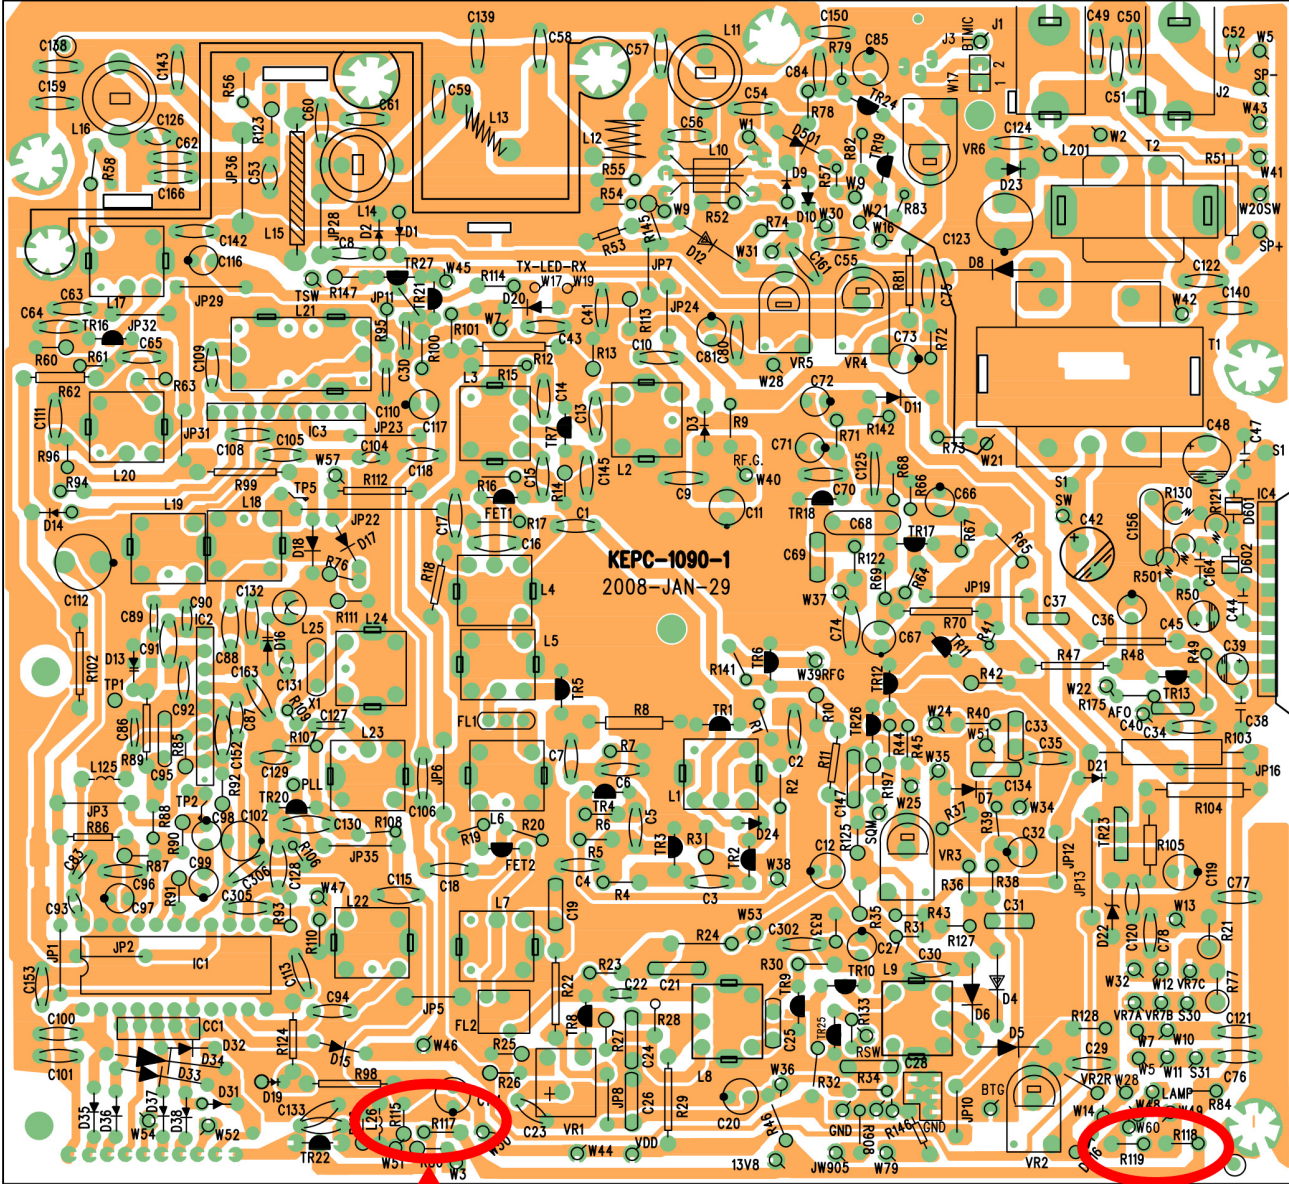

R115, R117

R118, R119