

FREQUENCY-CHANNEL NUMBER CHART

Low Band (-40)		Middle Band (+40)		High Band (+80)	
Frequency	Channel	Frequency	Channel	Frequency	Channel
26.515 MHz	1	26.965 MHz	1	27.415 MHz	41
26.525 MHz	2	26.975 MHz	2	27.425 MHz	42
26.535 MHz	3	26.985 MHz	3	27.435 MHz	43
26.555 MHz	4	27.005 MHz	4	27.455 MHz	44
26.565 MHz	5	27.015 MHz	5	27.465 MHz	45
26.575 MHz	6	27.025 MHz	6	27.475 MHz	46
26.585 MHz	7	27.035 MHz	7	27.485 MHz	47
26.605 MHz	8	27.055 MHz	8	27.505 MHz	48
26.615 MHz	9	27.065 MHz	9	27.515 MHz	49
26.625 MHz	10	27.075 MHz	10	27.525 MHz	50
26.635 MHz	11	27.085 MHz	11	27.535 MHz	51
26.655 MHz	12	27.105 MHz	12	27.555 MHz	52
26.665 MHz	13	27.115 MHz	13	27.565 MHz	53
26.675 MHz	14	27.125 MHz	14	27.575 MHz	54
26.685 MHz	15	27.135 MHz	15	27.585 MHz	55
26.705 MHz	16	27.155 MHz	16	27.605 MHz	56
26.715 MHz	17	27.165 MHz	17	27.615 MHz	57
26.725 MHz	18	27.175 MHz	18	27.625 MHz	58
26.735 MHz	19	27.185 MHz	19	27.635 MHz	59
26.755 MHz	20	27.205 MHz	20	27.655 MHz	60
26.765 MHz	21	27.215 MHz	21	27.665 MHz	61
26.775 MHz	22	27.225 MHz	22	27.675 MHz	62
26.805 MHz	23	27.255 MHz	23	27.705 MHz	63
26.785 MHz	24	27.235 MHz	24	27.685 MHz	64
26.795 MHz	25	27.245 MHz	25	27.695 MHz	65
26.815 MHz	26	27.265 MHz	26	27.715 MHz	66
26.825 MHz	27	27.275 MHz	27	27.725 MHz	67
26.835 MHz	28	27.285 MHz	28	27.735 MHz	68
26.845 MHz	29	27.295 MHz	29	27.745 MHz	69
26.855 MHz	30	27.305 MHz	30	27.755 MHz	70
26.865 MHz	31	27.315 MHz	31	27.765 MHz	71
26.875 MHz	32	27.325 MHz	32	27.775 MHz	72
26.885 MHz	33	27.335 MHz	33	27.785 MHz	73
26.895 MHz	34	27.345 MHz	34	27.795 MHz	74
26.905 MHz	35	27.355 MHz	35	27.805 MHz	75
26.915 MHz	36	27.365 MHz	36	27.815 MHz	76
26.925 MHz	37	27.375 MHz	37	27.825 MHz	77
26.935 MHz	38	27.385 MHz	38	27.835 MHz	78
26.945 MHz	39	27.395 MHz	39	27.845 MHz	79
26.955 MHz	40	27.405 MHz	40	27.855 MHz	80

**Extra controls:  
Their functions and uses.**

**High/Mid/Low band select switch.**

In this transceiver, 120 channels are divided into 3 groups of 40 channels low 40, middle 40, and high 40. This switch should be placed in the position to select the applicable band to which the channel you desire belongs. Each position selects the following:

Lo (-40) position:

Channels 26.515 to 26.955 MHz,

Mid (40) position:

Channels 26.965 to 27.405 MHz

Hi (80) position:

Channels 27.415 to 27.855 MHz.

The output power has been set at 5 watts for optimum performance.

**AM-FM mode switch.**

Selects the mode of transmission and reception.

Either the conventional AM can be selected or special FM operation.

The ANL function has been built into the circuit.

*COJT 510 DX*