


Switch	Pos	Part#
MODE	3	EWSL31027K
R. B.	2	EWSL31026K
NB	3	EWSL31027K
10Khz	2	EWSL31026K

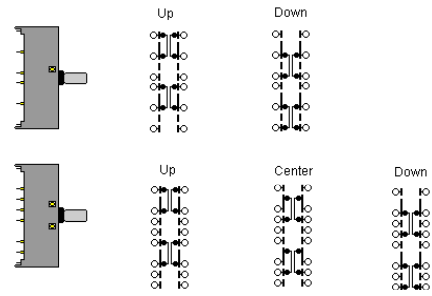


View from bottom of Switch

Note: The wire colors used in this diagram are based on the radio used. Keep in mind that the color of the wires used could / will vary from radio to radio.

Wire Color Chart

- Black Light Green
- Brown Green
- Red Blue
- Orange Violet
- Yellow Gray
- White

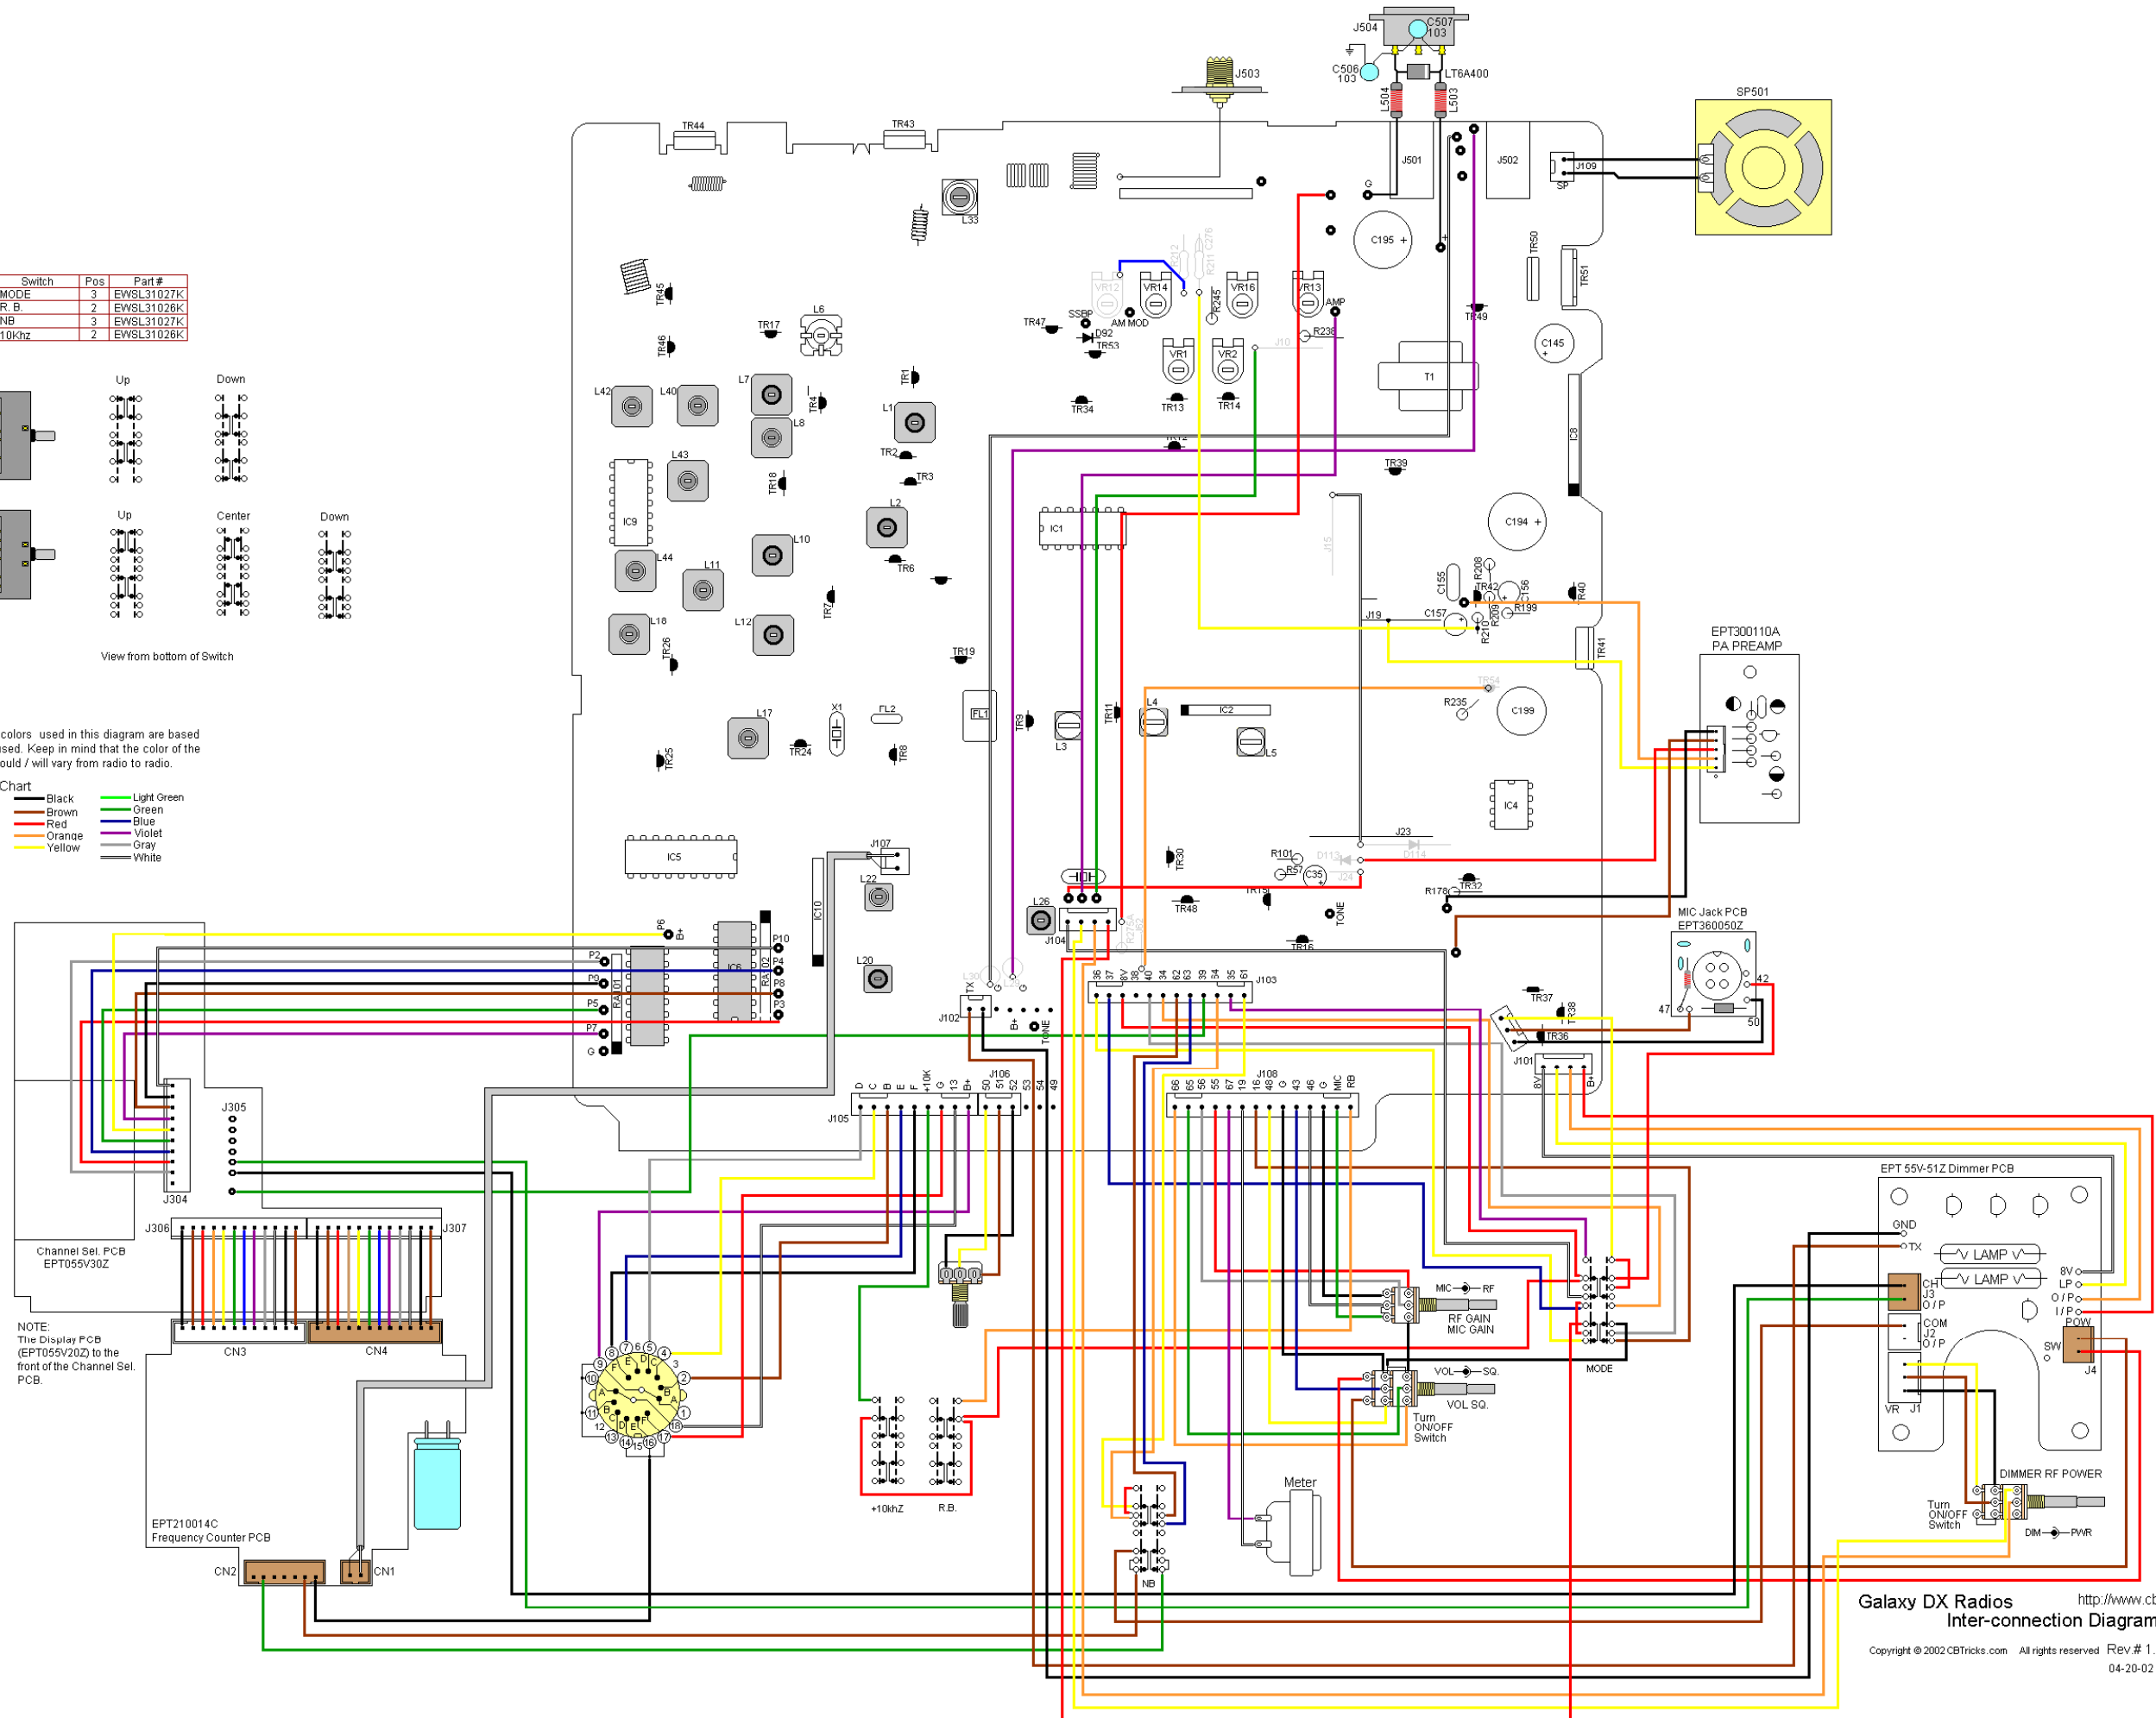

NOTE: The Display PCB (EPT055V20Z) to the front of the Channel Sel. PCB.