

ECHO / ROBOT MODE Switch EWRT32002S 6 Position

Position  
 A = Echo  
 B = VC  
 C = R1  
 D = R2  
 E = R3  
 F = R4


8 Position Band Switch

Position  
 A = Band A  
 B = Band B  
 C = Band C  
 D = Band D  
 E = Band E  
 F = Band F  
 G = Band G  
 H = Band H

NOTE: The wiring to the Channel Sel. PCB is shown with the Frequency Mod in place.

See diagram below and to the right for more info.

Please note some switch contacts are connected together on the PCB.

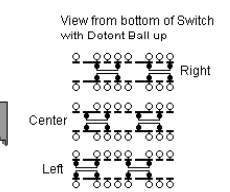

Note: The wire colors used in this diagram are based on the radio used. Keep in mind that the color of the wires used could / will vary from radio to radio.

Wire Color Chart

Black	Light Green
Brown	Green
Red	Blue
Orange	Violet
Yellow	Gray
	White

Galaxy DX Radios DX73V Inter-connection Diagram  
 Copyright © 2000, 2001 CBTricks. All rights reserved.  
 Rev.# 1.6 http://www.cbtricks.com 10-18-2001