


Position
 A = Band A & E
 B = Band B & F
 C = Band C & G
 D = Band D & F

Position
 A = PA
 B = FM
 C = AM
 D = USB
 E = LSB

Switch	Pgs	Part #
BAND	2	EWSL31026K
R. B.	2	EWSL31026K
NB	3	EWSL31027K
ROBOT/ECHO	3	EWSL31027K
	2	EWSL31026K

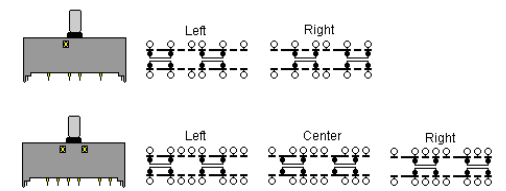

View from bottom of Switch with Delent Ball up

Note: The wire colors used in this diagram are based on the radio used. Keep in mind that the color of the wires used could / will vary from radio to radio.

Wire Color Chart

Black	Light Green
Brown	Green
Red	Blue
Orange	Violet
Yellow	Gray
	White