


- TR51~53, 151, 152  
TR101~103

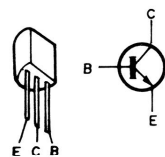

RADIO AND AUDIO BLOCK

PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	NO.	VOLTAGE	NO.	VOLTAGE
IC151							
①	5.5V	⑩	0V (0V)	①	3.8V	⑩	0.9V
②	1.9V	⑪	1.5V (1.5V)	②	3.0V	⑪	0.5V
③	2.1V	⑫	1.3V (1.3V)	③	7.0V	⑫	7.9V
④	0V	⑬	1.6V (1.6V)	④	1.7V	⑬	3.2V
⑤	10V	⑭	1.6V (1.6V)	⑤	8.4V	⑭	2.7V
⑥	3.2V	⑮	1.5V (1.5V)	⑥	1.7V	⑮	7.8V
⑦	10V	⑯	2.4V (2.4V)	⑦	1.3V	⑯	
IC152				IC201, 301			
①	11V (11V)	①	7.5V	⑩	1.5V		
②	2.6V (2.6V)	②	0V	⑪	0.9V		
③	2.6V (2.6V)	③	9.3V	⑫	10V		
④	3.6V (3.6V)	④	12.0V	⑬	1.6V		
⑤	3.6V (3.6V)	⑤	7.8V	⑭	1.6V		
⑥	12.5V (0.9V)	⑥	0V	⑮	5.6V		
⑦	0V (0V)	⑦	6.6V	⑯	0.9V		
⑧	0.8V (0.8V)	⑧	13V	⑰	0.4V		
		⑨	13.8V	⑱	5.4V		

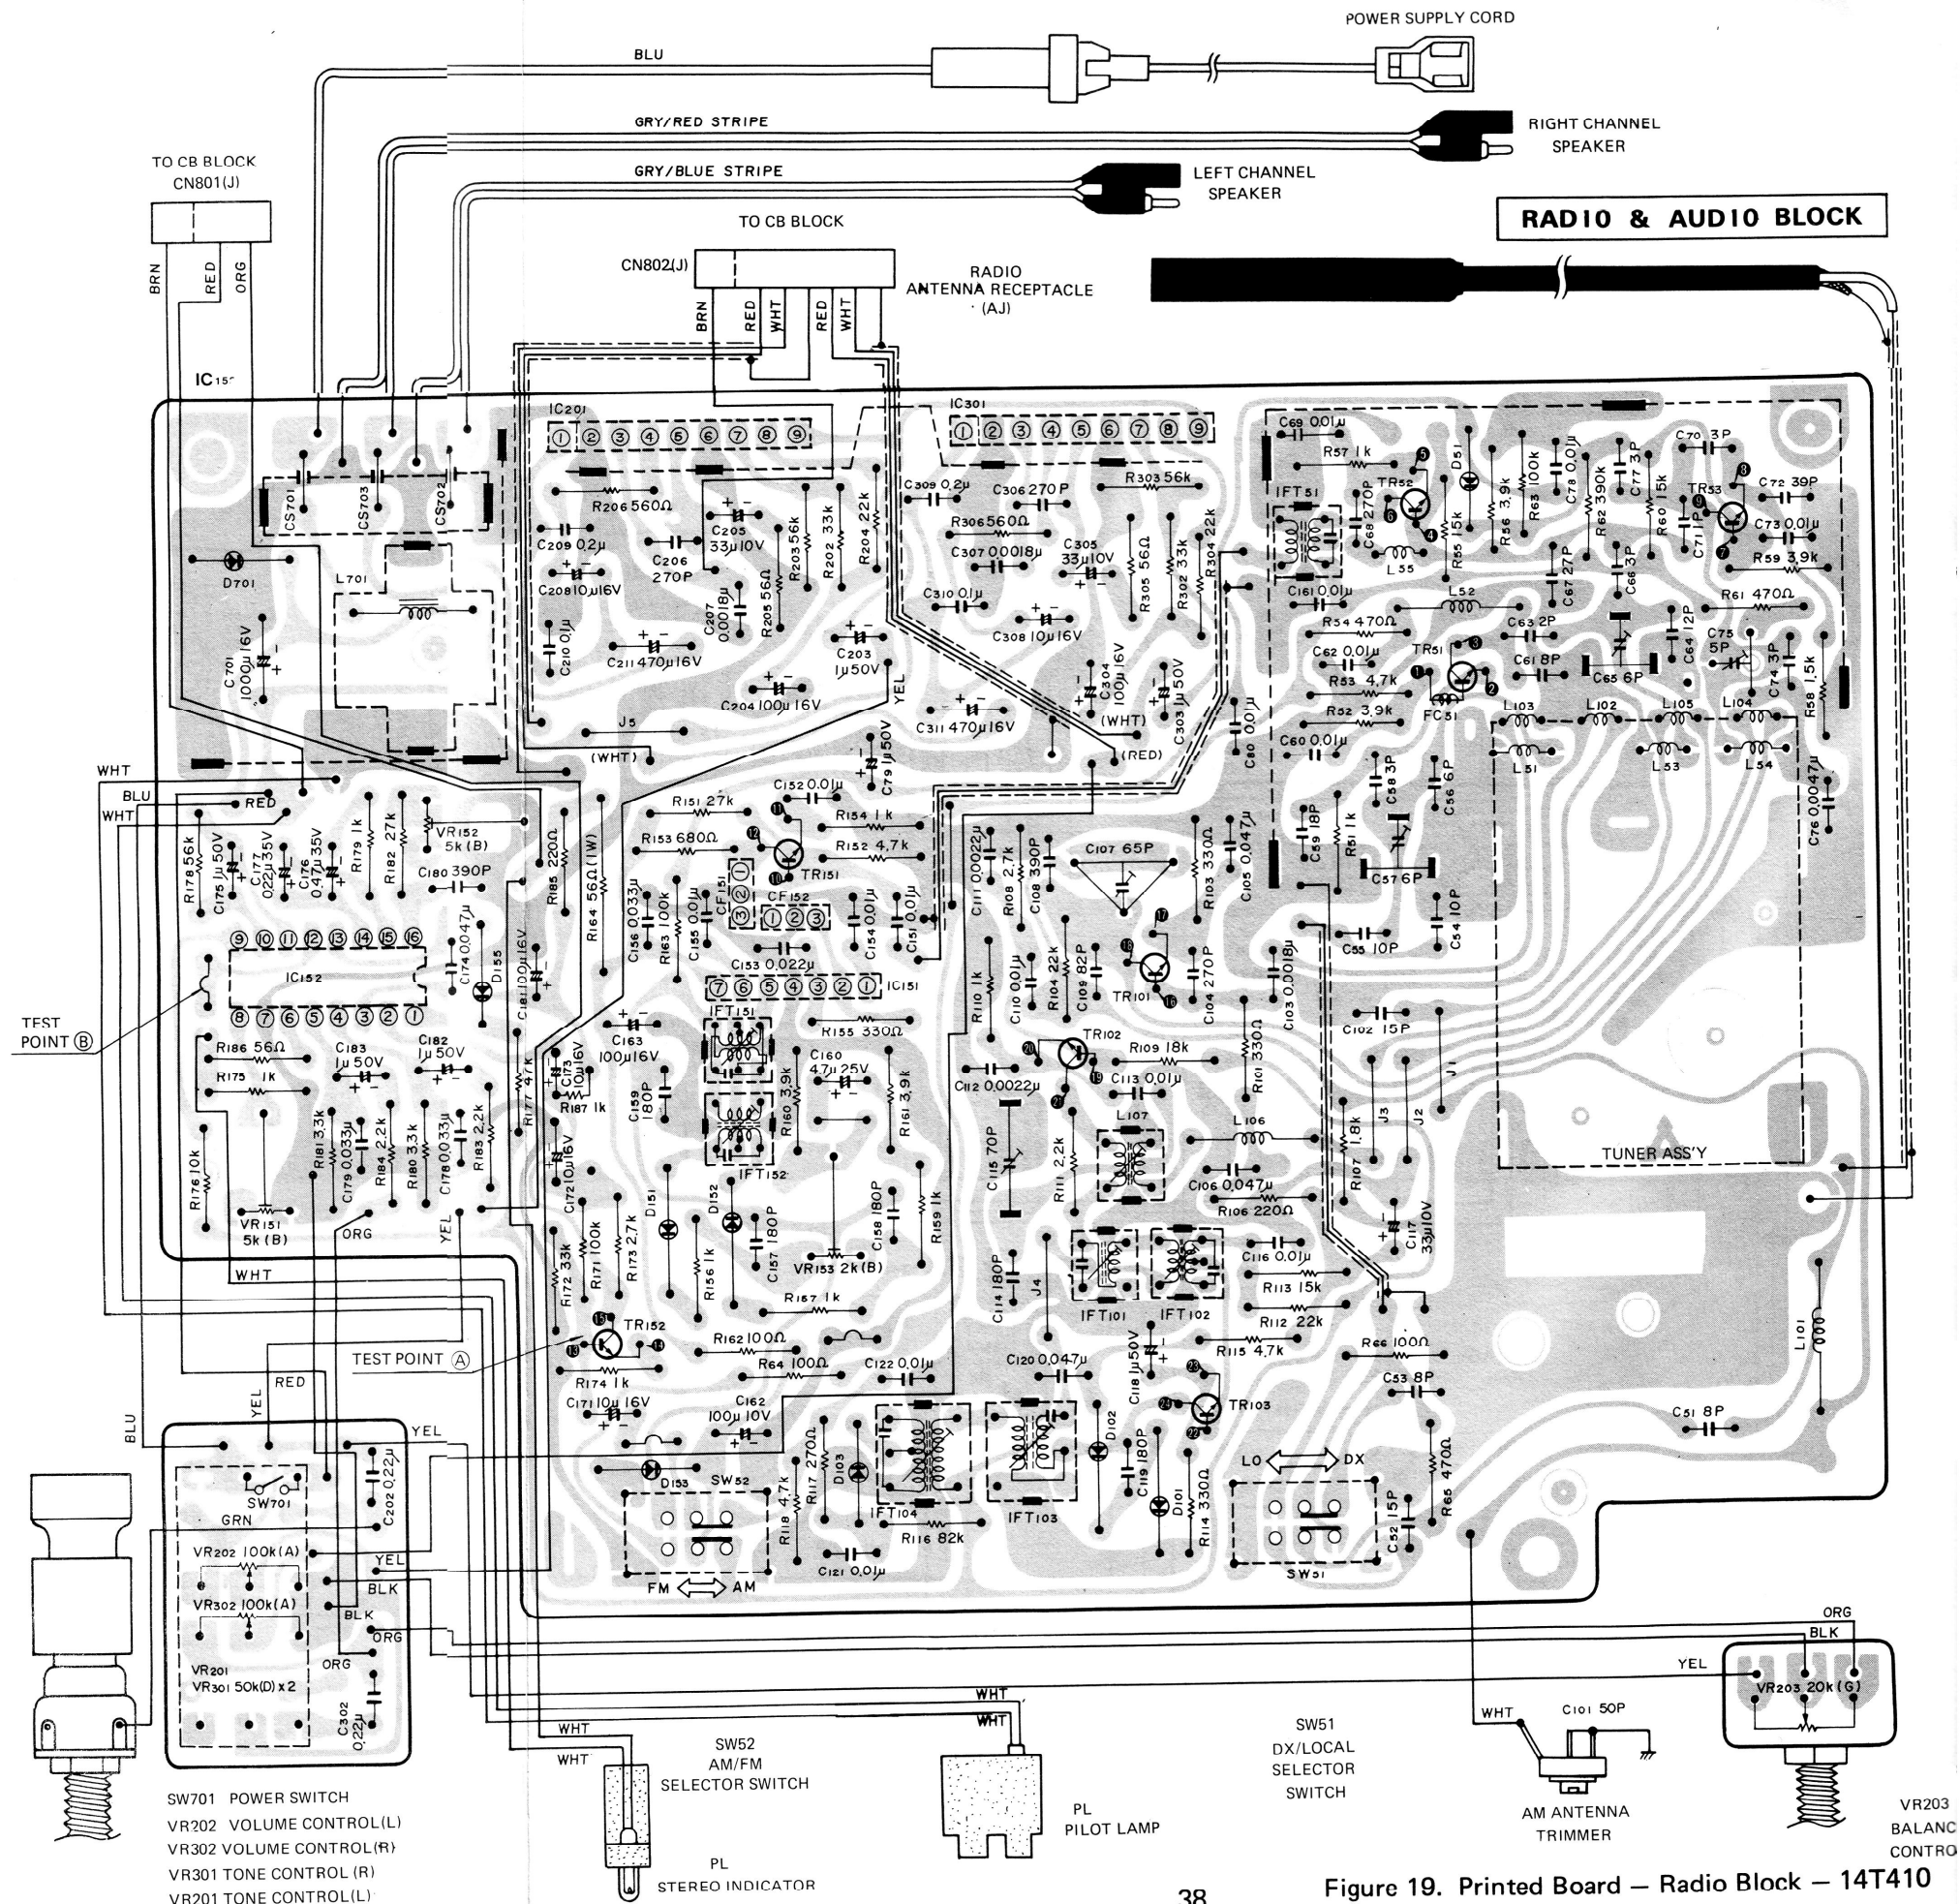


Figure 19. Printed Board - Radio Block - 14T410