

# SPECIFIC INSTALLATION INSTRUCTIONS (CONT)

## FOR VSB-1

### ROBYN SB-540D -


Compressor- Remove C311 and C331. Insert BLACK lead towards R397 and the WHITE wire towards R322.

Expander- Remove C193. Insert the BLACK wire towards the common of Q19 and the WHITE wire towards R195.

NO PREAMP

### SEARS ROADTALKER 40(934-3827) -

Compressor-

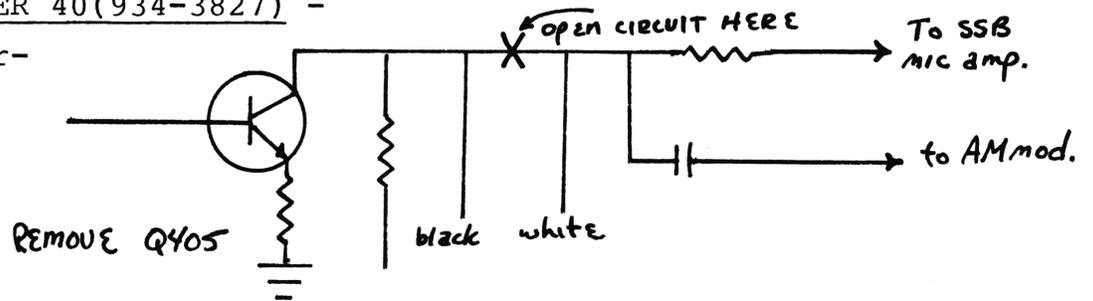

Expander- Insert at C263, the BLACK lead towards D257, and the WHITE lead towards P36.

PREAMP RECOMMENDED

### SHARP CB - 2460 -

Compressor/Expander- This radio will require use of an additional 4PDT relay- wired as follows:

