


PACIFIC 800 SSB

CLARIFIER MODIFICATION

by J.O.

"This is an exceptional radio for the money!" SCB NEEDS: Schematic, Owner's Manual, Service Data - anything....

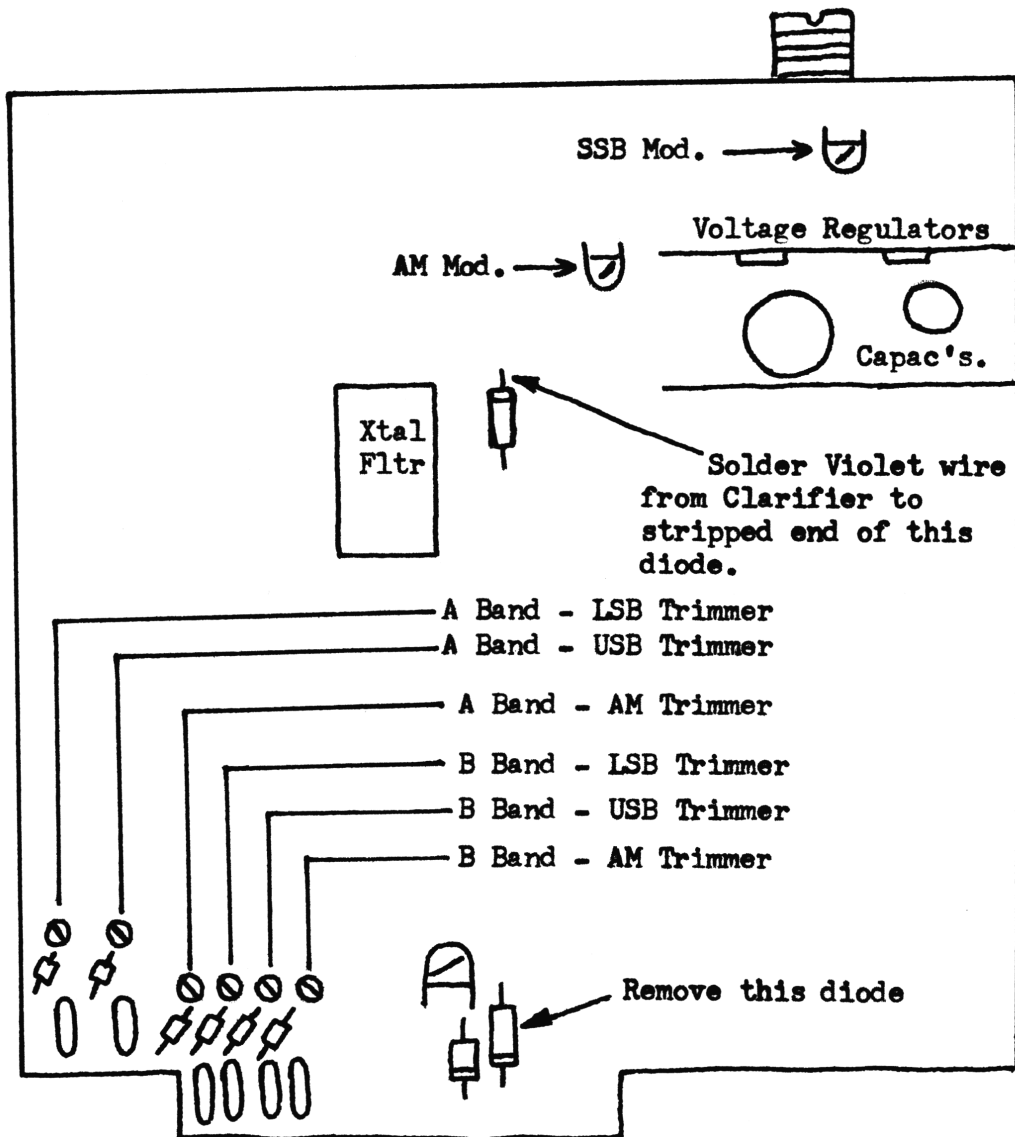

1. Remove resistor on back of clarifier control.
2. Remove the diode shown on drawing.
3. Solder the Black wire from the clarifier control to DC ground.
4. Solder the Violet wire from the clarifier to the diode as shown, +8VDC.
5. Unit should now slide; -4 to +2KHz. For additional slide lift the banded end of diodes between the Xtals and trimmer-add 5.6mH choke in series...Yields -8 to +6KHz slide. Have found it best to do only on the AM, as gets very touchy on SSB.